



QUICKSTART SET-UP INSTRUCTIONS

Issue 1.0

STEP 1 INDICATOR STATION SET-UP

The Indicator Station provides a central station for setting up the system and providing ongoing monitoring.

Unpack the Indicator Station.

Retain the Instructions and Log Book. These can be stored in the red document holder provided and hung near the Indicator Station.



Remove Indicator Station from backplate

Hold the Indicator Station firmly at the top and remove from the slider backplate.



Wall-mount the Slider Backplate


Secure the slider backplate in the location you have selected for the Indicator Station, using appropriate fixings. Fasten with at least 4 screws.

The Indicator Station should be sited in a secure, accessible indoor location. The Indicator Station should be mounted about eye-level, and ideally near a window.



Switch on the Indicator Station

Switch on the Indicator Station using the red on/off switch on the rear of the station. The LCD screen will turn on and the station LEDs will perform a test sequence.

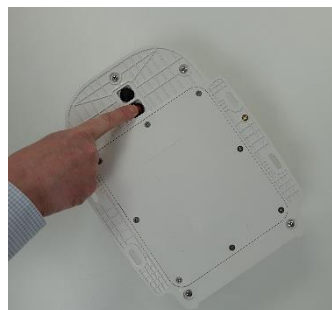

E&OE Howler UK reserve the right to change specification at any time without prior warning



Howler UK, Inspiration Place, 1-4 Mitchell Road, Fernside Park, Wimborne, Dorset BH21 7SG
Telephone +44 (0)330 7000 777 | Email info@howleruk.com | Visit howleruk.com



QUICKSTART SET-UP INSTRUCTIONS


Issue 1.0

Set date and time

Use the green arrow keys and the ENTER button to set the date and time and 'Save'



 The LCD will display the 'Alarms Normal' screen once the date and time have been set.

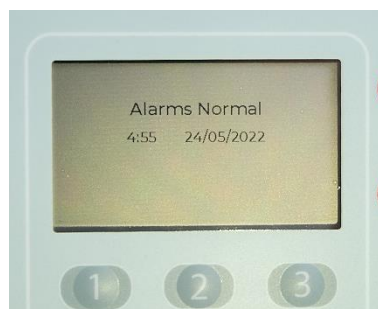


Secure the Indicator Station in the slider backplate

Slide the Indicator Station into the backplate.



Secure the Indicator Station in place, using the pozi-drive machine screw provided.

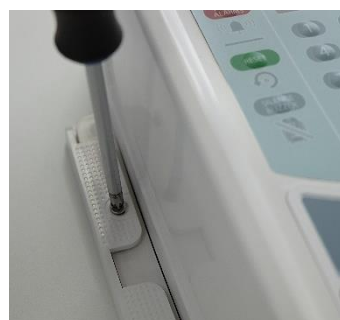

E&OE Howler UK reserve the right to change specification at any time without prior warning



Howler UK, Inspiration Place, 1-4 Mitchell Road, Fernside Park, Wimborne, Dorset BH21 7SG
Telephone +44 (0)330 7000 777 | Email info@howleruk.com | Visit howleruk.com




QUICKSTART SET-UP INSTRUCTIONS

Issue 1.0

STEP 2 CONNECT STATIONS

Remove the first Howler station from the slider backplate and switch it on using the red on/off switch on the rear of the station.

 The LEDs on the front on the station will flash.

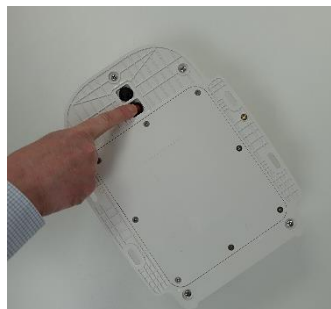

Secure the Indicator Station in the slider backplate

Slide the station into slider backplate on the mobile fire point.

NB: If you do not have fire points, the station can be replaced in the slider backplate until you are ready to install it in the correct location.

Secure the station in place, using the pozi-drive machine screw provided.

The LED on the left of the station will flash amber until it makes connection with the Indicator Station, it will then start to pulse green.

Repeat this process for all stations.



E&OE Howler UK reserve the right to change specification at any time without prior warning



Howler UK, Inspiration Place, 1-4 Mitchell Road, Fernside Park, Wimborne, Dorset BH21 7SG
Telephone +44 (0)330 7000 777 | Email info@howleruk.com | Visit howleruk.com



QUICKSTART SET-UP INSTRUCTIONS

Issue 1.0

STEP 3 CHECK CONNECTIONS LIST

In order to check the stations are all connected to the Indicator Station, enter the SETUP menu on the Indicator Station using the default code: 2468.

Select 1 'Howler Connections'

Select 1 'All Connections'


 



A full list of the stations on the system will be displayed. The total number of stations on the system is displayed at the top of the screen (in the photo '2' stations)

Check the status of each station using the green arrows to scroll to a station and press ENTER. This interrogates that station. The screen will display a 'Waiting for response' message.

If the message reads: 'Failed to Respond' wait a short while and re-try.

The status of the station will be displayed as shown. This confirms that the Indicator Station has spoken directly to the Station.

Press CLEAR to return to the main list, and continue scrolling through the list, interrogating each station. It can take a few minutes to interrogate all stations.

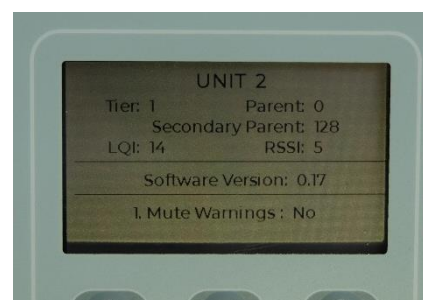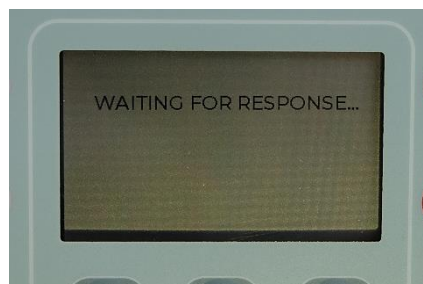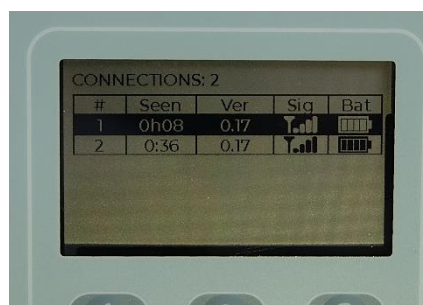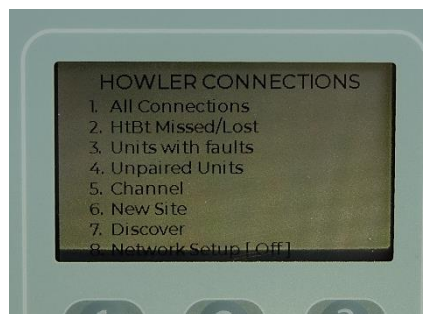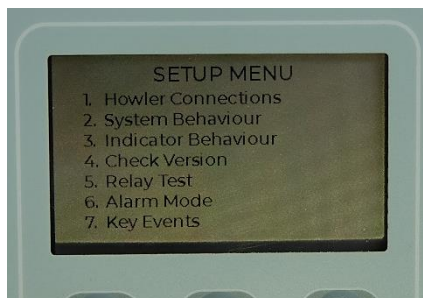

Howler UK, Inspiration Place, 1-4 Mitchell Road, Fernside Park, Wimborne, Dorset BH21 7SG
Telephone +44 (0)330 7000 777 | Email info@howleruk.com | Visit howleruk.com



QUICKSTART SET-UP INSTRUCTIONS

Issue 1.0

STEP 4 PLACE STATIONS IN CORRECT LOCATIONS

The stations can now be wheeled onto site and be set up in the correct locations as per your fire plan.

NB If you do not have mobile fire points, you will need to mount the slider backplates in the desired locations before installing each station. When you remove a station from the backplate, a 'Tamper warning' message will be displayed on the Indicator Station until the station is replaced in the slider backplate



STEP 5 SYSTEM TEST

Once all the stations are in position, a live test of the system should be performed.

This can be done by activating the fire button on any station. Check that all stations sound and then 'silence alarms' and 'reset' on the Indicator Station. When using the 'hot keys' on the Indicator Station, it will request the User Code to be entered. The default User Code is: 1234.

If you cannot perform a noisy test, use the First Aid button instead. As you test each station, a message will appear on the Indicator Station, which can be acknowledged. The message will clear as soon as the button is reset on the activated station. You may need two people to carry out this test efficiently.



For technical assistance call Howler UK on:

0330 7000 777
tech.support@howleruk.com

E&OE Howler UK reserve the right to change specification at any time without prior warning



Howler UK, Inspiration Place, 1-4 Mitchell Road, Fernside Park, Wimborne, Dorset BH21 7SG
Telephone +44 (0)330 7000 777 | Email info@howleruk.com | Visit howleruk.com